

TURNING HEATER "OFF" AND "ON"

2100 SERIES

Turning the heater "OFF" suspends all functions of the heater. To turn the heater "OFF" use the down arrow to decrease the room temperature set point until "OFF" is displayed on the faceplate. To turn the heater "ON" use the up arrow to adjust room temperature set point to the desired temperature. If desired, power to the heater can be shut off at the breaker panel.

NOTE: *The heater MUST remain "ON" if being used to supply a peak control signal to other controlled loads. If utilizing the Steffes time clock module and power is off to the blower/control circuit for an extended period of time, it may be necessary to reset the current day and time.*



1000/2000 SERIES

You may wish to turn the heater off during the summer months. Brick core charging and room temperature sensing can be turned off without disconnecting power to the heater.

Using Automatic Charge Control

1. To turn the heater "OFF", use the down arrow button to decrease the room temperature set point until the control panel face plate displays "OFF".
2. To turn the heater back "ON", press the up arrow button to adjust room temperature to the desired set point.



Using Manual Charge Control

1. To turn the heater "OFF", hold the M button until room temperature set point appears on the TEMPERATURE digits of the faceplate.
2. Use the down arrow button to decrease the room temperature set point until the control panel faceplate displays "OFF".
3. To turn the heater back "ON", press and hold the M and the up arrow buttons at the same time. When room temperature set point displays on the faceplate, let go of the M button. Use the up arrow button to adjust room temperature to the desired set point.

TURNING HEATER "OFF" AND "ON"

S SERIES

To turn the S Series heater off for the summer season, turn the charge control knob in the lower right hand corner of the heater to the "0" position. If your charge control knob does not have markings or if they have worn away, turn the knob counter clockwise as far as it will go. If desired, power to the heater can be shut off at the breaker panel.



EXT SERIES

To turn the EXT Series heater off for the summer season, place the Heat Storage button in the off position and turn the room temperature control knob to 55. The heater will act as a space heater if the room temperature drops below 55 degrees Fahrenheit during an off-peak period. If desired, power to the heater can be shut off at the breaker panel.



COMFORT PLUS RESIDENTIAL (3100/4100/5100 SERIES)

The Comfort Plus Residential heating systems have a series of circuit breakers on the front of the system. The element (charging) circuits may be turned "OFF" by switching all of the 60 AMP breakers located on the front of the electrical panel to the DOWN position. To turn the element circuits "ON", switch the 60 AMP breakers to the UP position.

NOTE: *The 60 AMP breakers MUST all be turned "ON" or all turned "OFF". The 15 AMP circuit breaker MUST remain "ON" to operate controls in the heating system if:*

- *using the system in conjunction with a heat pump or air conditioner.*
- *using the system to control other loads.*
- *using the optional Steffes Time Clock Module.*
- *using the Comfort Plus Hydronic system (5100 Series) to exercise the pumps during periods of inactivity.*

